

8 BUTTON REMOTE OPERATING INSTALLER AND OWNER GUIDE

I N S P I R E

COLLECTION

**THIS GUIDE IS THE OPERATING INSTRUCTIONS FOR
THE 8 BUTTON REMOTE ON MODELS**

**500RC, 600RC,
800RC & 1000RC**

IMPORTANT

**THIS GUIDE MUST BE PLACED INSIDE OR ATTACHED
TO THE INSTALLER AND OWNER GUIDE SUPPLIED
WITH THE GAS FIRE. IT MUST BE LEFT WITH THE
OWNER.**

**THIS GUIDE MUST BE READ IN CONJUNCTION WITH
THE INSTALLER AND OWNER GUIDE SUPPLIED WITH
THE GAS FIRE.**

INSTALLER AND OWNER GUIDE

OPERATING INSTRUCTIONS

8-SYMBOL


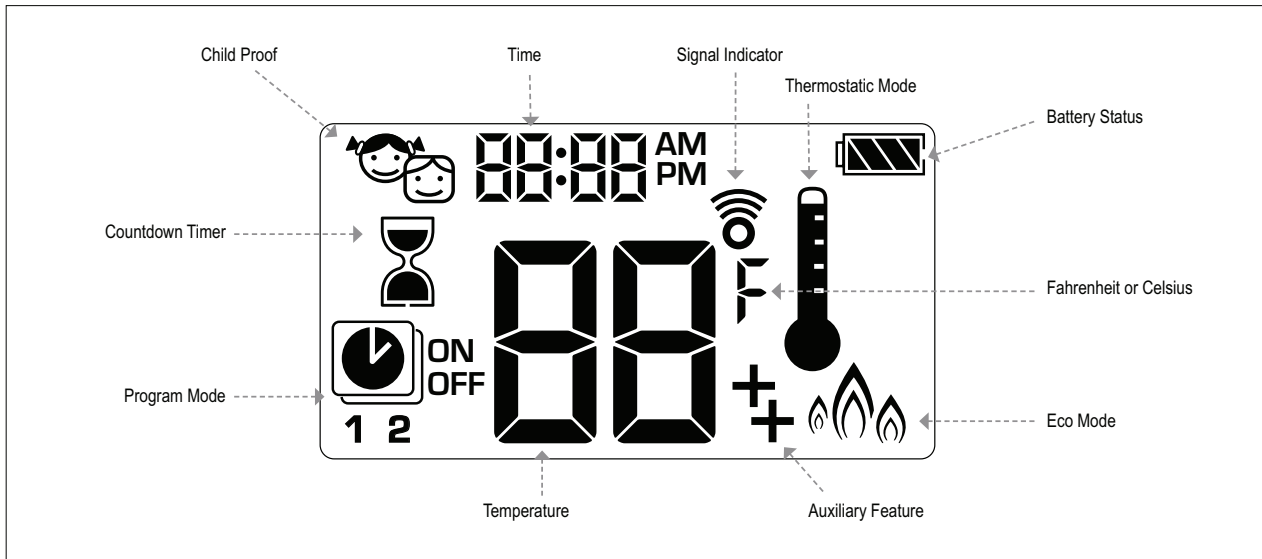


Figure 22: 8-symbol Display


SETTING FAHRENHEIT or CELSIUS

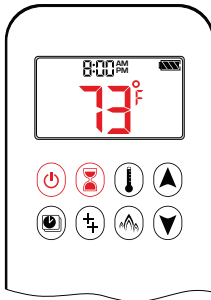

To change between °C and °F, press and buttons simultaneously.

NOTE: Choosing °F results in a 12 hour clock. Choosing °C results in a 24 hour clock.


CHILD PROOF

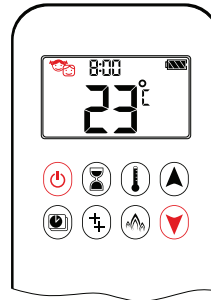

ON:
To activate press and buttons simultaneously. displayed and the handset is rendered inoperable, except for the off function.

OFF:
To deactivate press and buttons simultaneously. disappears.

SETTING the TIME

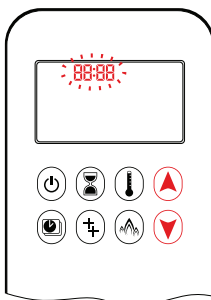

1. Press and buttons simultaneously. **Day** flashes.
2. Press or button to select a number to correspond with the day of the week (e.g. 1=Monday, 2=Tuesday, 3=Wednesday, 4=Thursday, 5=Friday, 6=Saturday, 7=Sunday).
3. Press and buttons simultaneously. **Hour** flashes.
4. To select hour press or button.
5. Press and buttons simultaneously. **Minutes** flash.
6. To select minutes press or button.
7. To confirm press and buttons simultaneously or wait.

MANUAL MODE (HANDSET)

NOTICE

BEFORE OPERATING

1. Make sure MANUAL knob on the GV60 valve is in the **ON**, full counterclockwise position.
2. Place the ON/OFF switch (if equipped) in the **I (ON)** position.


TO TURN ON FIRE

▲ WARNING

When pilot ignition is confirmed, motor turns automatically to maximum flame height.

INSTALLER AND OWNER GUIDE

OPERATING INSTRUCTIONS

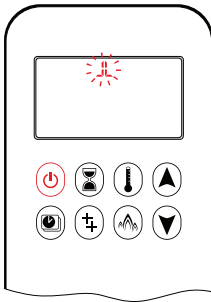


Handset One-Button Operation (Default Setting)

- Press until two short beeps and a blinking series of lines confirms the start sequence has begun; release button.
- Main gas flows once pilot ignition is confirmed.
- Handset automatically goes into Manual Mode after main burner ignition.

NOTICE

Change from one-button to two-button ignition operation by pressing and holding for 10 sec. immediately after installing batteries. **ON** is displayed and **1** is flashing. When change is complete **1** will change to **2**.

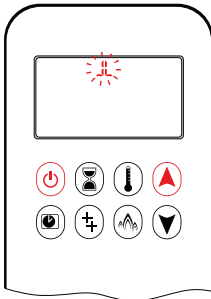

Handset Two-Button Operation

- Press and simultaneously until two short beeps and a blinking series of lines confirms the start sequence has begun; release buttons.
- Main gas flows once pilot ignition is confirmed.
- Handset automatically goes into Manual Mode after main burner ignition.

NOTICE

Change from two-button to one-button ignition operation by pressing and holding for 10 sec. immediately after installing batteries. **ON** is displayed and **2** is flashing. When change is complete **2** will change to **1**.

▲ WARNING


If the pilot does not stay lit after several tries, turn the main valve knob to **OFF** and follow the instructions "TURN OFF GAS TO APPLIANCE" (page 25).

STANDBY MODE (PILOT FLAME)

Handset

- Press and hold to set appliance to pilot flame.

TO TURN OFF FIRE

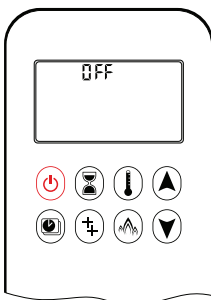


Handset

- Press to turn OFF.

NOTE: There is a 5 sec delay before the next ignition is possible.

FLAME HEIGHT ADJUSTMENT

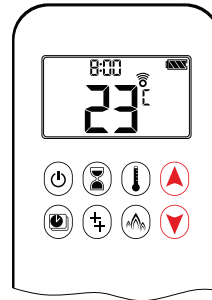


Handset

- To increase flame height press and hold .
- To decrease flame height or to set appliance to pilot flame, press and hold .


DESIGNATED LOW FIRE and HIGH FIRE

NOTE: Backlight must be on for high fire and low fire double-click operation.

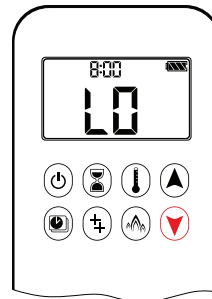

- To go to low fire, double-click button. **LO** is displayed.

NOTE: Flame goes to high fire first before going to low fire.

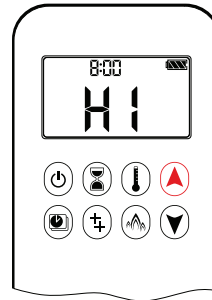


- To go to high fire, double-click button. **HI** is displayed.

▲ WARNING

If the appliance will not operate, follow the instructions "TURN OFF GAS TO APPLIANCE" (page 25).

COUNTDOWN TIMER

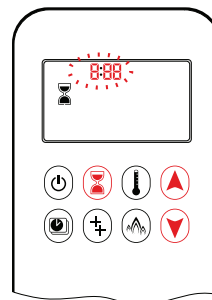

ON/SETTING:

1. Press and hold until displayed, and **hour** flashes.
2. To select hour press or .
3. To confirm press . **Minutes** flash.
4. To select minutes press or .
5. To confirm press or wait.

OFF:


Press , and countdown time disappear.

NOTE: At end of countdown time period, the fire turns off. The Countdown Timer only works in Manual, Thermostatic, and Eco Modes. Maximum countdown time is 9 hours and 50 minutes.

INSTALLER AND OWNER GUIDE


OPERATING INSTRUCTIONS

MODES of OPERATION

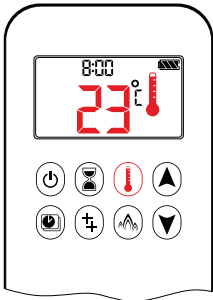


Thermostatic Mode

The room temperature is measured and compared to the set temperature. The flame height is then automatically adjusted to achieve the set temperature.

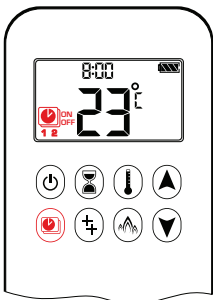

Program Mode


PROGRAMS 1 and 2, each can be programmed to go on and off at specific times at a set temperature.

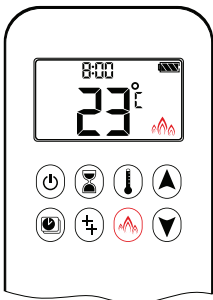

Eco Mode

Flame height modulates between high and low. If the room temperature is lower than the set temperature, the flame height stays on high for a longer period of time. If the room temperature is higher than the set temperature, the flame height stays on low for a longer period of time. One cycle lasts approx. 20 min.

THERMOSTATIC MODE

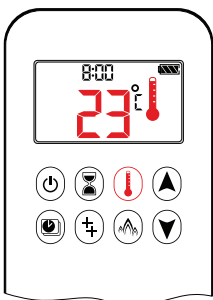


ON:

Press button. displayed, preset temperature displayed briefly, and then room temperature displayed.

OFF:


1. Press button.
2. Press or button to enter Manual Mode.
3. Press button to enter Program Mode.
4. Press button to enter Eco Mode.

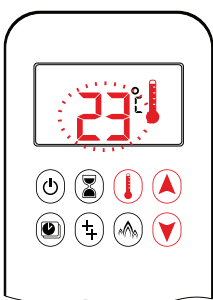

SETTING:


1. Press button and hold until displayed, temperature flashes.
2. To adjust set temperature press or button.
3. To confirm press button or wait.

PROGRAM MODE

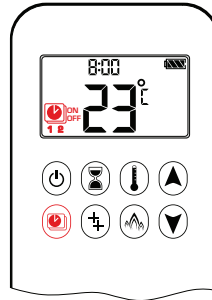

ON:

Press button. , **1** or **2**, **ON** or **OFF** displayed.

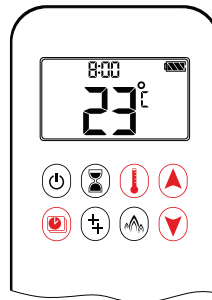

OFF:


1. Press or or button to enter Manual Mode.
2. Press button to enter Thermostatic Mode.

NOTE: The set temperature for Thermostatic Mode is the temperature for the on time in Program Mode. Changing the Thermostatic Mode set temperature also changes the on time temperature in Program Mode.

Default settings:

ON TIME (Thermostatic) TEMPERATURE: 21 °C (70 °F)


OFF TIME TEMPERATURE: "--" (pilot flame only)

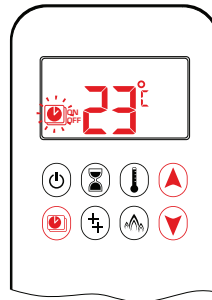

TEMPERATURE SETTING:

1. Press button and hold until flashes. **ON** and set temperature (setting in Thermostatic Mode) displayed.
2. To continue press button or wait. , **OFF** displayed, temperature flashes.
3. Select off temperature by pressing the or button.
4. To confirm press button.

NOTE: The on (Thermostatic) and off set temperatures are the same for each day.

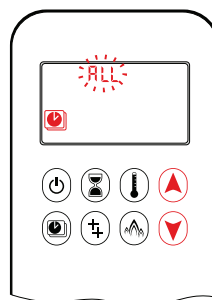


DAY SETTING:

5. **ALL** flashes. Press or button to choose between **ALL**, **SASU**, **1**, **2**, **3**, **4**, **5**, **6**, **7**.
6. To confirm press button.


INSTALLER AND OWNER GUIDE

OPERATING INSTRUCTIONS

RLL selected

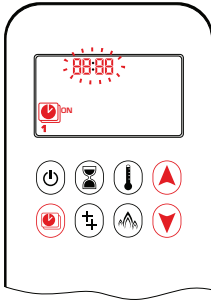

- ON TIME SETTING (PROGRAM 1):
7. Press **1**, **ON** displayed, RLL is displayed shortly, and **hour** flashes.
 8. To select hour press **▲** or **▼** button.
 9. To confirm press **⊙** button. **1**, **ON** displayed, RLL displayed shortly, and **minutes** flash.
 10. To select minutes press **▲** or **▼** button.
 11. To confirm press **⊙** button.

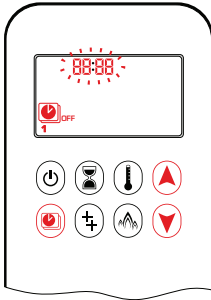

- OFF TIME SETTING (PROGRAM 1):
12. Press **1**, **OFF** displayed, RLL is displayed shortly, and **hour** flashes.
 13. To select hour, press **▲** or **▼** button.
 14. To confirm press **⊙** button. **1**, **OFF** displayed, RLL displayed shortly, and **minutes** flash.
 15. To select minutes press **▲** or **▼** button.
 16. To confirm press **⊙** button.

NOTE: Either continue to PROGRAM 2 and set on and off times or stop programming at this point, and PROGRAM 2 remains deactivated.

NOTE: PROGRAM 1 and 2 use the same on (Thermostatic) and off temperatures for RLL, 5R5U and Daily Timer (1, 2, 3, 4, 5, 6, 7). Once a new on (Thermostatic) and/or off temperature has been set, that temperature becomes the new default setting.


NOTE: If RLL, 5R5U or Daily Timer are programmed for PROGRAM 1 and PROGRAM 2 on and off times, these become the new default times. The batteries must be removed to clear the PROGRAM 1 and PROGRAM 2 on and off times and temperatures.

5R5U or Daily Timer (1, 2, 3, 4, 5, 6, 7) selected

- Set on time and off time using same procedure as "RLL selected" (above).
- 5R5U: Set on time and off time for both Saturday and Sunday.
- Daily Timer: Unique on and off times may be set for a single day of the week, for multiple days of the week, or for every day of the week.
- Wait to finish setting.

AUXILIARY FEATURE

Upon ignition burner 1 is on and burner 2 is in the last setting.

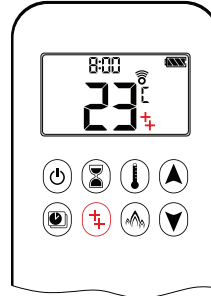


ON:
To switch a burner on, press the **+** button. **+** displayed.

OFF:
To switch the burner OFF, press the **+** button. **+** disappears.

NOTE: The latching solenoid valve cannot operate manually. If the receiver battery runs down it will remain in the last operating position.

ECO MODE

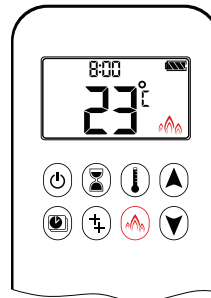

ON:
Press **+** button to enter Eco Mode. **+** displayed.

OFF:
Press **+** button. **+** disappears.



If you experience a problem with the operation of the remote control:

– First refer to the Installer & User instruction for additional information.

– Simply call our UK Helpline on **0844 879 35 88** or from the Republic of Ireland on **01 842 8222** for any general advice that you may need.